


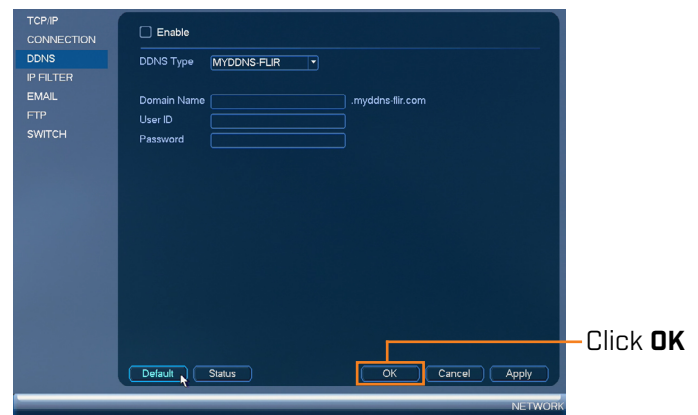
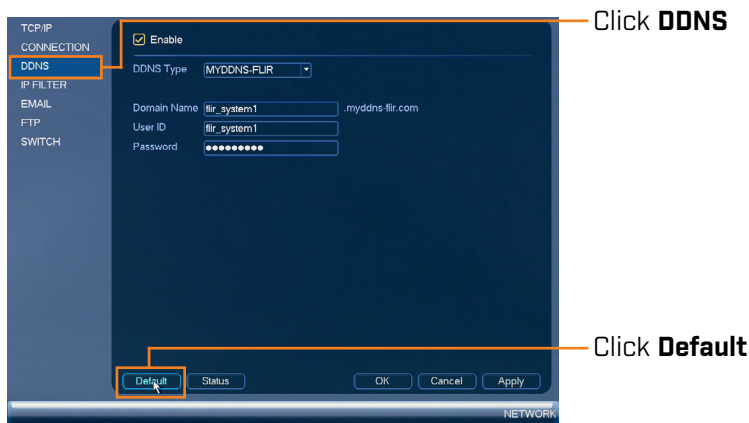
This document will instruct you how to disable DDNS connectivity to your FLIR recorder.

Step 1: Disabling DDNS on your FLIR recorder

First, you must disable DDNS from the main menu of your FLIR recorder.

To disable DDNS:

1. Right-click on the live viewing screen of your recorder, then click **Main Menu**. Enter your password if prompted.
2. From the Main Menu, click  then select **NETWORK**.
3. Click **DDNS** on the left side of the menu. Click **Default** to remove previous DDNS credentials and disable DDNS on your recorder. Click **OK** to save changes.



Step 2: Removing forwarded ports from your router

Lastly, you must access your router to remove the forwarded HTTP port (default: **80**) and Client port (default: **35000**) for your recorder.

For instructions specific to your router model, please consult the instruction manual for your router.