

DIGIMERGE

Product FAQ

FAQ No: FAQ-0800304-01

Date: March 4, 2008

Product: D17802 Series

Motion Recording Setup on the D17802 Series

1. Press the **Setup** button on the front panel of the DVR.
2. Using the down arrow button (▼) highlight *Record Menu* and press the Enter button.



3. Press **Enter** again to highlight *Simple* under *Recording Mode*. Press **Enter** again and the green highlight will change to yellow.


4. Use the down arrow (▼) button to change *Simple* to *Advanced*.




5. Press **Enter** again. A message will be displayed:

Recording Setup changed.
Window will close.
Please, re-enter the Record
Menu OK

6. Press **Enter** to select OK. The main menu will come up.
7. Select *Record Menu* and press **Enter**.

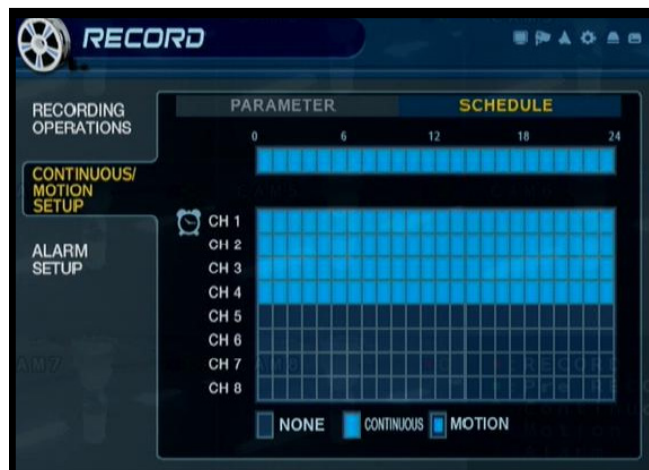


8. In the Record menu, scroll down to Continuous/ Motion Setup. Press **Enter** once and *Parameter* will be highlighted.
9. Press the right arrow (▶) to scroll to *Schedule*.
10. Press **Enter** three times and the highlight box will turn yellow.
11. Using the right arrow (▶) scroll all the way to the last box. Use the down arrow (▼) to scroll all the way down to the last channel.
12. The yellow highlight should cover all channels
13. Press **Enter** once. A box will pop-up showing *None*, *Continuous* and *Motion*.

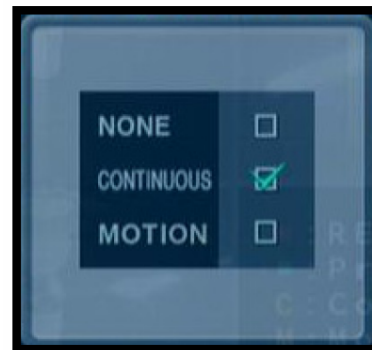

14. Scroll down to *Motion* and a checkmark should appear beside the box. Press **Enter** once.

Note: All the boxes should change to a small box with a border around it.

15. Press **Return** three times. A message will appear:

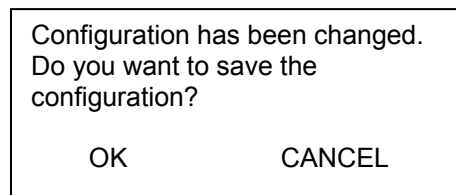

16. Using the left arrow (◀), scroll to OK and press **Enter**.
17. The Main Menu should be displayed. Press **Return** to exit the Main Menu.

To check if the unit is recording in Motion, all channels should have a green box on the top right hand corner. When motion is picked up it will change to a red box with a yellow **M**.