

DIGIMERGE

Product FAQ

FAQ No: FAQ-080228-02

Date: February 28, 2008

Product: DHU500R

Motion Recording Setup in the DHU500R Series

1. Press the **Setup** button on the front panel of the unit.
2. Using the right arrow button (▶) highlight *Record Menu* and press the



Enter button.



Setup options

3. Using the up and down arrows (▲, ▼), scroll down to Continuous/Motion Setup.



Continuous/Motion Setup

4. Press **Enter** once, then (▼) and schedule will be highlighted.



Schedule

5. Press **Enter** twice and the first block on the Time Interval Bar will be highlighted in dark blue.
6. Press the right arrow (▶) to scroll to the right until you reach the last block (24) and (▼) to select channels.

Note: To select all channels from 0 - 24, when first block on time interval is highlighted dark blue press (▲) then (◀) and enter

7. Press **Enter** again and a *Continuous/Motion* option box will come up.
8. Using the down arrow button (▼), scroll down to *Motion* and press Enter. A blue check mark should appear in the box beside *Motion*.




Continuous/ Motion Option Box

Note: Use **Enter** to check and uncheck items


9. Press **Return**  once.

10. The Channel boxes should appear as a small blue box.

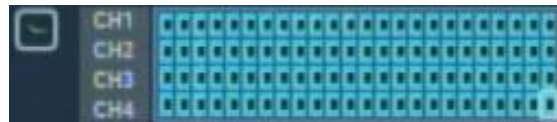

Schedule

11. Press **Return** three times and a message box should appear.

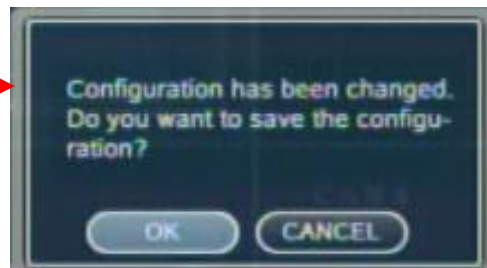

12. Select OK and press **Enter**.
13. The main *Setup Menu* should appear. Press **Return** once.
14. The unit should now record in Motion.

To check if the unit is recording in Motion, all channels should have a green box on the top right hand corner. When motion is picked up it will change to a red box with a yellow **M**.